

**Sony 12 mega pixels W230**

**Just the basic functions**

**ON/  
OFF**



**Shutter  
release**

**Now it's on -what do I do?**



**Zoom in and out**

**Set the wheel  
on the green camera**

**toggle**  
-press to see subject  
press to see  
picture

**Main menu**  
set picture size- 5m



At 12:00  
you have display  
battery usage/picture size  
number of picture taken

**Flash settings**

**Self timer**


The flower symbol  
for close ups

**Main Menu**

**HOME**  
All the setting on the camera

**I took a picture and want to delete it**

**To delete **one picture, multiple picture or all pictures** do the following: select the picture then push menu button, The screen below will appear**

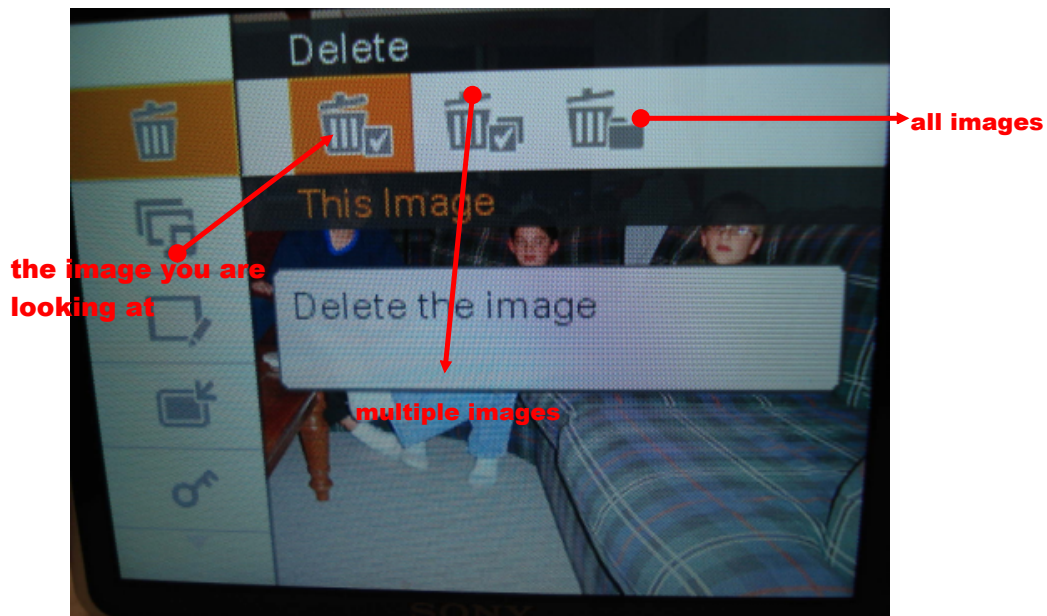

## **Now how do I get the pictures on my computer?**

**click here to watch a video on  
downloading pictures without any  
software**

